

ACTIVE AIR™


18 Inch High Velocity

OPERATION

1. Set your fan on a level dry surface.
2. Install the control box to the rear side of the Motor Housing by sliding the Control Box to the slot of the motor housing.
3. Plug the power cord into a standard AC wall outlet.
4. Select the desired speed for your needs by using the Rotary Control Switch on Control Box.
5. To change the air angle (us asTable fan only), adjust angle and by moving Motor Housing to desired angle.
6. To start or stop fan oscillating, push or pull the Oscillating knob on the top of Motor Housing.

CARE AND STORAGE

1. Turn the Control to OFF and **UNPLUG THE FAN BEFORE CLEANING.**
2. Use only a soft damp cloth to clean the fan.
3. **DO NOT** immerse the fan in water and never allow water to drip into the motor housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. Store the fan in its original box or cover the fan to protect it from dust. Store it in a cool dry place.

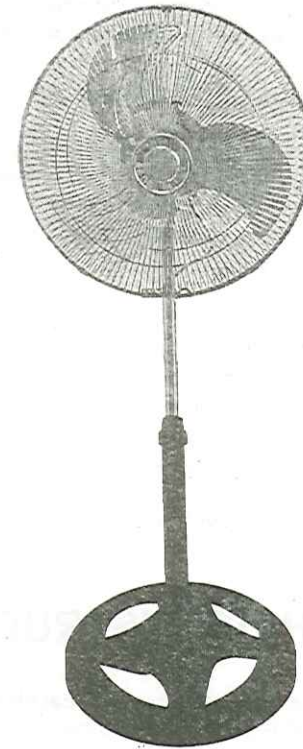

Instruction Manual

CH-S1871A(ACFP18)

INSTRUCTIONS FOR USE AND CARE

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury.
2. High Velocity fans are designed to create rapid air movement, therefore make sure the fan is not placed near drapes, curtains or any objects that may be drawn into the fan inlet.
3. To protect against electrical shock, do not immerse unit, plug or cord in water or spray with liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the fan from the outlet when not in use, when moving fan from one location to another, servicing and before cleaning.
6. Do not operate fan in the presence of explosive and/or flammable fumes.
7. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
8. Avoid contact with moving fan parts.
9. To disconnect, grip the plug and pull it from the wall outlet. Never yank the cord.
10. Always use on a dry level surface.
11. Do not hang or mount fan on a wall or ceiling.
12. Do not operate without the fan grills properly in place.
13. Be careful not to place the fan too close to the edge of that surface.
14. Do not use outdoors.
15. Do not let the power cord hang over the edge of a table or counter or let it touch any hot surfaces.

SAVE THESE INSTRUCTIONS

WARNING: TO reduce the risk of fire or electrical shock, DO NOT USE THIS FAN with any SOLID STATE Speed Control Device.

IF the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid any hazards.

To install Grille and Blade

1. Mount the Rear Grill to the motor by matching the 4 holes on the Rear Grille to the 4 screws on the Motor Housing. Tighten the Rear Grille with 4 Nuts firmly.
2. Insert the Blade onto the Motor Shaft. Match the screw of the Blade with the hole of the shaft and tighten the screw.
Note: Be sure the protrudent drum of blade shaft is toward front.
3. Test the Fan Blade by rotating it with your hand. Make sure there is no contact with the Grille. The fan blade should rotate freely. Repeat step 2 if blade does not spin freely.
4. Mount Front Grille onto Rear Grill by matching the holes on right bottom side of grille ring. Inserting upper hook clip of Front Grille over Rear Grille. Secure with 5 clips on the Front Grill and tighten the screw firmly.

