

# 24 Hour Programmable Timer

## INSTRUCTIONS

### TO SET THE PRESENT TIME:

Turn the round dial in the direction of the arrow (clockwise) until the black arrow points to the present time.

### TO SET TIMER:

Ensure that the black arrow is pointing to the correct time. Push the black segments downward to turn the timer ON. Each segment represents 15 minutes of time. (E.g.–To turn the timer ON for 30 minutes, you would push 2 black segments (beside each other) downward at the specific time.)

### ACTIVATION OF APPLIANCE:

To use as a normal outlet: Slide the red switch upward to the ON position and the appliance can be used as normal. The timer will not be active, and the power will constantly be ON.

### TO USE AS A TIMER:

Set the segments to ON and OFF times, plug the timer into an electric socket, then plug the electrical appliance into the timer socket. Slide the red switch downwards. The timer will activate the electrical appliance as the dial rotates through the pushed down black segments. As the timer rotates to segments that are not pushed down, it will deactivate the appliance.

**CAUTION: TIMER CAN ONLY BE USED TO MAXIMUM POWER OF 1875W (115V, 60Hz). FOR INDOOR USE ONLY.**