

ECO PLUS[®]

Eco Air Pump Instructions

Models: Eco Air 8 / Eco Air 4 / Eco Air 2 / Eco Air 1 Plus
Product: #728365 / #728360 / #728355 / #728350



Sunlight Supply, Inc.
National Garden Wholesale.

IMPORTANT SAFETY INSTRUCTIONS


THESE INSTRUCTIONS MUST BE CAREFULLY READ BEFORE YOU CONNECT THE PRODUCT. WE CANNOT TAKE ANY RESPONSIBILITY FOR DETERIORATION CAUSED BY IMPROPER USE OF THE PRODUCT.

WARNING - To guard against injury, basic safety precautions should be observed, including the following:

A) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

DANGER - To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium and pond equipment. For each of the following situations, do not attempt repairs by yourself; return the appliance to an authorized service facility for service or discard the appliance:

- Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.
- Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner.
- To avoid the possibility of the appliance plug or outlet getting wet, position aquarium stand and tank to one side of a wall mounted outlet to prevent water from dripping onto the outlet or plug. A “drip loop” shown in the figure to the right, should be arranged by the user for each cord connecting an aquarium appliance to an outlet. A “drip loop” is that part of the cord below the level of the outlet, or the connector if an extension cord is used, to prevent water travelling along the cord and coming in contact with the outlet. If the plug or outlet does get wet, DO NOT unplug the cord. Disconnect the circuit breaker that supplies power to the appliance. Then, unplug and examine for presence of water in the outlet.

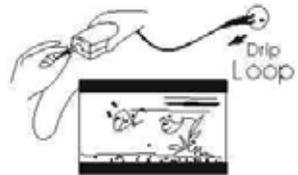

- B) Close supervision is necessary when any appliance is used by or near children.
- C) To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, and the like.
- D) Always unplug an appliance from an outlet when not in use, before

putting on or taking off parts, and before cleaning. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.


- E) Do not use an appliance for other than intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
- F) Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
- G) Make sure an appliance mounted on a tank is securely installed before operating it.
- H) Read and observe all important notices on the appliances.
- I) If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
- J) This appliance has a polarized plug (One blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted.

This appliance has no user serviceable parts.

K) SAVE THESE INSTRUCTIONS


1. INSTALLATION

Place your air pump above the water level in vertical or horizontal position. (See Fig. 1). If you place it below water level you must use a valve, this way you will avoid any back flow of water when the current falls.

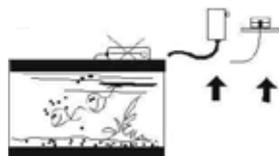

2. OPERATION

Your air pump isn't intended to be used in water. Never place the air pump in water (See Fig. 2).

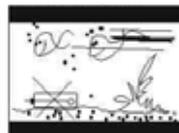

DANGER:

In case the air pump falls into the water, disconnect the power cord before you remove it.

3. MAINTENANCE

How to disconnect the air pump:

- A) Remove the tubing connected to the aquarium.

B) Disconnect the power cord.

DISCONNECT THE POWER SUPPLY TO ALL EQUIPMENT IN THE AQUARIUM BEFORE PUTTING YOUR HANDS IN THE WATER.

SPECIAL CARE SHOULD BE TAKEN WITH THE USE OF ELECTRICAL EQUIPMENT BY OR NEAR CHILDREN.

- Use with 120 volt power source.
- If the power cord or the pump case is damaged or broken, it must be replaced before using.
- DO NOT Submerge the pump!



WARRANTY

This product has a warranty of one year for any defects in material or workmanship. Warranty is NOT VALID if the pump is not properly used, neglected, or there is a lack of maintenance or accidental damage either to the pump. If the pump fails due to manufacturing fault within this warranty period, the pump will be either repaired or replaced free of charge. Please return the pump to place of purchase with the original bill receipt.

The manufacturer or distributor shall not be held responsible for any damages caused by defective components or materials, or for loss incurred because of the interruption of services or any consequential, or incidental damages or expenses arising from the manufacture, sale, use or misuses of this product. The manufacturer shall not be held responsible for any loss of fish, plants or other livestock as a result of any failure or defect of this product.



Sunlight Supply, Inc.

National Garden Wholesale.

www.sunlightsupply.com

Made in China