



IMPULSE BAG SEALER

INSTRUCTIONS

Part #744366

Thank you for purchasing a Harvest Keeper® Impulse Bag Sealer! To get the most out of your sealer and enjoy safe, reliable operation, please thoroughly read and understand these instructions before operating. Please keep these instructions for future reference.

SAFETY INFORMATION

For your safety, follow these precautions when using your Harvest Keeper® Bag Sealer (Part #744366)

WARNING! Before performing any maintenance or cleaning be sure the unit is off and the PLUG IS REMOVED FROM THE OUTLET OR POWER SOURCE!


Important Safety Guidelines

PLEASE READ THESE INSTRUCTIONS COMPLETELY AND FULLY UNDERSTAND ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS UNIT. FAILURE TO COMPLY WITH PROCEDURES AND SAFEGUARDS MAY RESULT IN SERIOUS INJURY OR PROPERTY DAMAGE! SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE AND KEEP THEM IN A SAFE LOCATION.

WARNING!!!

1. ALWAYS disconnect Sealer from power source before performing any maintenance/cleaning.
2. DO NOT use the Sealer on wet or hot surfaces or near heat sources.
3. DO NOT submerge Sealer or power cord in water or any other liquid. Never rinse under a tap.
4. Plug Sealer into grounded 3-prong power source that complies with electrical specifications. Avoid using an extension cord.
5. To disconnect, unplug directly from power source. DO NOT disconnect by pulling on cord.
6. DO NOT operate Sealer with a damaged power cord. If damaged, it must be replaced by manufacturer.
7. Keep unit unplugged when not in use.
8. Keep fingers and other body parts clear of sealing ribbon AT ALL TIMES. These parts become hot and may cause injury.
9. DO NOT take Sealer apart – doing so will void the warranty!
10. DO NOT leave Sealer unattended. Before leaving work area, ensure that power is disconnected by unplugging the unit.
11. Close supervision is necessary when Sealer is used by or near children.
12. DO NOT use the Sealer outdoors.
13. Be sure Sealer is on stable work surface. DO NOT let power cord hang over the edge of work surface.
14. The Sealer is ONLY intended to be used with bags specifically designed for heat sealing. DO NOT use with grocery or produce bags, or any other household bags!

SAVE THESE INSTRUCTIONS

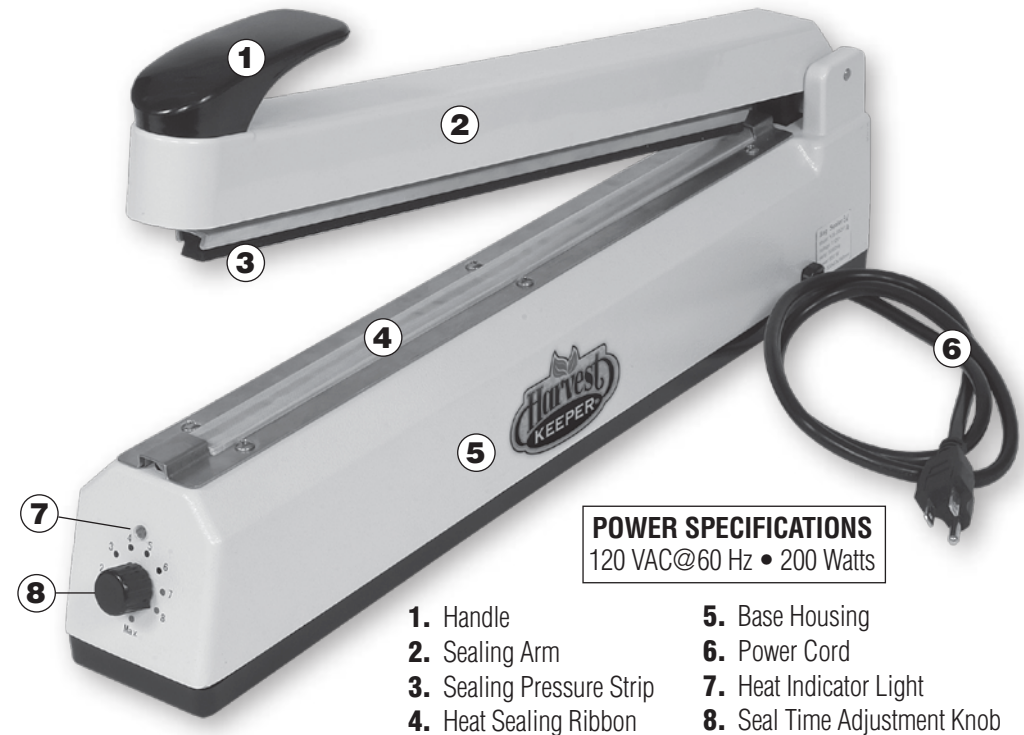

POWER SPECIFICATIONS
120 VAC@60 Hz • 200 Watts

- | | |
|---------------------------|------------------------------|
| 1. Handle | 5. Base Housing |
| 2. Sealing Arm | 6. Power Cord |
| 3. Sealing Pressure Strip | 7. Heat Indicator Light |
| 4. Heat Sealing Ribbon | 8. Seal Time Adjustment Knob |

OPERATING INSTRUCTIONS

NOTE: There is no power switch on this Sealer. Power is accessed only when Sealing Arm is fully depressed onto Heat Sealing Ribbon. However, unit should still be unplugged when not in use.

Plug power cord into correct outlet. Adjust the Seal Time Adjustment Knob according to the material thickness which needs to be sealed. Put bag end to be sealed onto the Heat Sealing Ribbon and firmly press the handle down. The timer circuit will control the sealing time automatically. Heat Indicator Light will glow while heat is being applied. Once the Heat Indicator Light goes off, wait 1-2 seconds, then release the handle. Sealing is finished.

- If the seal is broken or melted through, heating time may be too long. Turn the Seal Time Adjustment Knob to a shorter sealing time.
- If the seal is incomplete or separates easily, heating time may be too short. Turn the Seal Time Adjustment Knob to a longer sealing time.
- If bag sticks on the Heat Sealing Ribbon, cooling time may be too short. Hold the handle down for a longer time after the sealing is finished (after the indicator light goes off) to allow more cooling time.

CARE AND MAINTENANCE

Make sure unit has cooled prior to cleaning. Wipe and clean all outside surfaces with damp cloth or paper towel (DO NOT contact Heat Sealing Ribbon). NEVER immerse Sealer in water or other liquids. Dry all surfaces before reusing the unit. When not in use, store Sealer in a clean, safe and dry location.