

# TEKPRO<sup>®</sup> LED 44

PRODUCT NUMBER  
960905

The world's greatest garage and shop light™ 4 FT 4 LAMPS / LED 41 WATT LAMPS

## IMPORTANT PRODUCT INFORMATION READ IMMEDIATELY

### SAFETY FIRST!


FAILURE TO OBSERVE THE FOLLOWING SAFETY WARNINGS MAY RESULT IN SERIOUS INJURY OR DEATH. IN ADDITION, FAILURE TO OBSERVE THESE SAFETY WARNINGS WILL RESULT IN A WAIVER OF ALL LIABILITIES ON THE MANUFACTURER AND WILL VOID ALL WARRANTIES.

#### WARNING:

- Handle with care and be careful of sharp edges.
- Disconnect power before re-lamping.
- When re-lamping, make sure lamp has time to cool before touching.
- Make sure power cord is connected properly.
- DO NOT hang the fixture by the power cord.
- DO NOT make contact with the interior of the socket while the power is on.
- DO NOT plug this fixture into a supply voltage other than 120 volt.
- Use only the included AgroLED<sup>®</sup> iSunlight<sup>®</sup> 41 watt lamps.
- DO NOT use T5 VHO (Very High Output) lamps in this fixture.
- DO NOT daisy chain more than 7.5 amps.
- DO NOT operate the fixture in wet locations.
- DO NOT attempt to open, rewire or reconfigure any components of the fixture.
- Any modifications made to the product will void the warranty.
- This product operates at high temperatures. Keep away from children.

#### SETUP & LAMP INSTALLATION:

1. Carefully remove your Tek Pro<sup>®</sup> LED 44 Fixture and V-hangers from the box. This fixture includes four AgroLED<sup>®</sup> iSunlight<sup>®</sup> lamps. One lamp will be seated in each lamp receptacle - take care not to break them as you unpackage the fixture.
2. Place the fixture on a flat surface with the lamps facing upward. Carefully remove each lamp from its receptacle, discard the outer sleeve and reinstall the lamps into the fixture. To remove the lamp, rotate it 90° in either direction (Fig. A) until the lamp base forks are perpendicular to the fixture and gently pull the lamp directly upward. To reinstall the lamps into the fixture, slide both ends of the lamp into the lamp receptacles at each end of the fixture and rotate the lamp 90° in either direction (Fig. A). You will feel a small click when the lamp is properly seated. (*TIP - handle each end of the lamp simultaneously. This will help reduce breakage.*)
3. Carefully turn the fixture over so that the lamps are facing downward - take care to avoid breaking the lamps when you are placing the fixture face down. Attach the included V-Hangers to the hanging brackets on the top of the fixture (Fig. C). Your Tek Pro LED 44 is now ready for hanging.
4. Plug the unit into a properly rated 120V NEMA configured receptacle. Turn on using on/off switch.

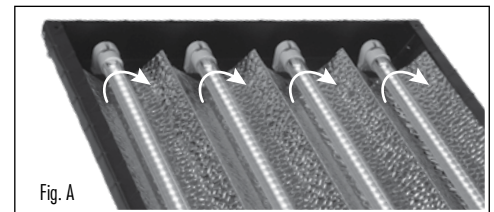

*When hanging your Tek Pro Fixture, be sure to use stud mounted eye bolts or some other means of hanging the fixture securely from the ceiling. Attach a properly weighted jack chain or hanging cable to the V-Hangers and suspend the fixture from the ceiling making sure to adjust the hanging level evenly on each end.*

#### TROUBLESHOOTING - If your fixture is not working properly...

- CHECK THE POWER SWITCH: Make sure the on/off switch located on the end of the fixture is in the ON position (Fig. C).
- CHECK YOUR ELECTRICAL SOURCE: Make sure the unit is plugged in properly and that the breaker is not tripped or fuse blown.
- CHECK THE LAMPS: Ensure lamps are properly locked into place. This is accomplished by turning the lamps ¼ turn in either direction.
- If there are individual bulbs that do not fire, make sure that the lamp is properly inserted and seated in the socket. If that does not work try swapping the bulbs around for others that are working. This will help determine if it is the bulbs or the fixture that is defective.



*If after reviewing troubleshooting tips the fixture will still not work.  
Please call the Tek Pro Service Hotline at 888-582-2762.*

#### WARRANTY INFORMATION 1 YEAR WARRANTY ON TEK PRO LED 44 FIXTURE

The manufacturer warrants the original purchaser of this product against defects in material and workmanship under normal use for 1 year on the Tek Pro LED 44 Fixture and 90 days on the included lamps. This warranty is expressly in lieu of all other warranties, expressed or implied, including the warranties of merchantability and fitness for use and of all other obligations or liabilities on the part of the seller. This warranty shall not apply to this product or any part thereof which has been damaged by accident, abuse, misuse, modification, negligence, alteration or misapplication. The manufacturer makes no warranty whatsoever in respect to accessories or parts not supplied with the fixture. This warranty shall apply only to the United States.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED

CE PRODUIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS

FOR PRODUCTS WITHOUT AN ATTACHMENT PLUG, A STRAIN RELIEF MUST BE USED ON TERMINAL END

POUR LES PRODUITS SANS PIÈCE JOINTE PLUG RÉDUCTEUR DE TENSION DOIT ÊTRE UTILISÉ SUR L'ESTRÉMITÉ TERMINALE

# TEK PRO® LED 44 PRODUCT ILLUSTRATION GUIDE

