



sun-huts.com

INSTRUCTIONS

Model 40

Part #706306

Assembled Size:
3.9'W x 2.0'D x 5.3'H

BEFORE YOU BEGIN: Make sure you have a clear, unobstructed area to work in. Lay out all poles and connectors, grouped according to their size and/or shape.

PARTS LIST

6 Floor & Ceiling Poles
45.3" 1150mm

5 Floor & Ceiling Poles
21.6" 550mm

8 Wall Poles
30.5" 775mm



4 Straight Pole Connectors



8 3-way Corner Connectors



6 Equipment Hanger Connectors



1 Window Cover




2 Vent Covers




2 Equipment Straps

1 Removable Mylar Floor Insert

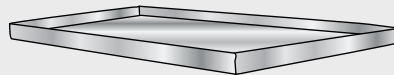

STEP 1


Lay out tent body, unzip all doors, then fully expose floor tray and smooth it flat. Start frame assembly with floor poles first, inside floor tray as shown.

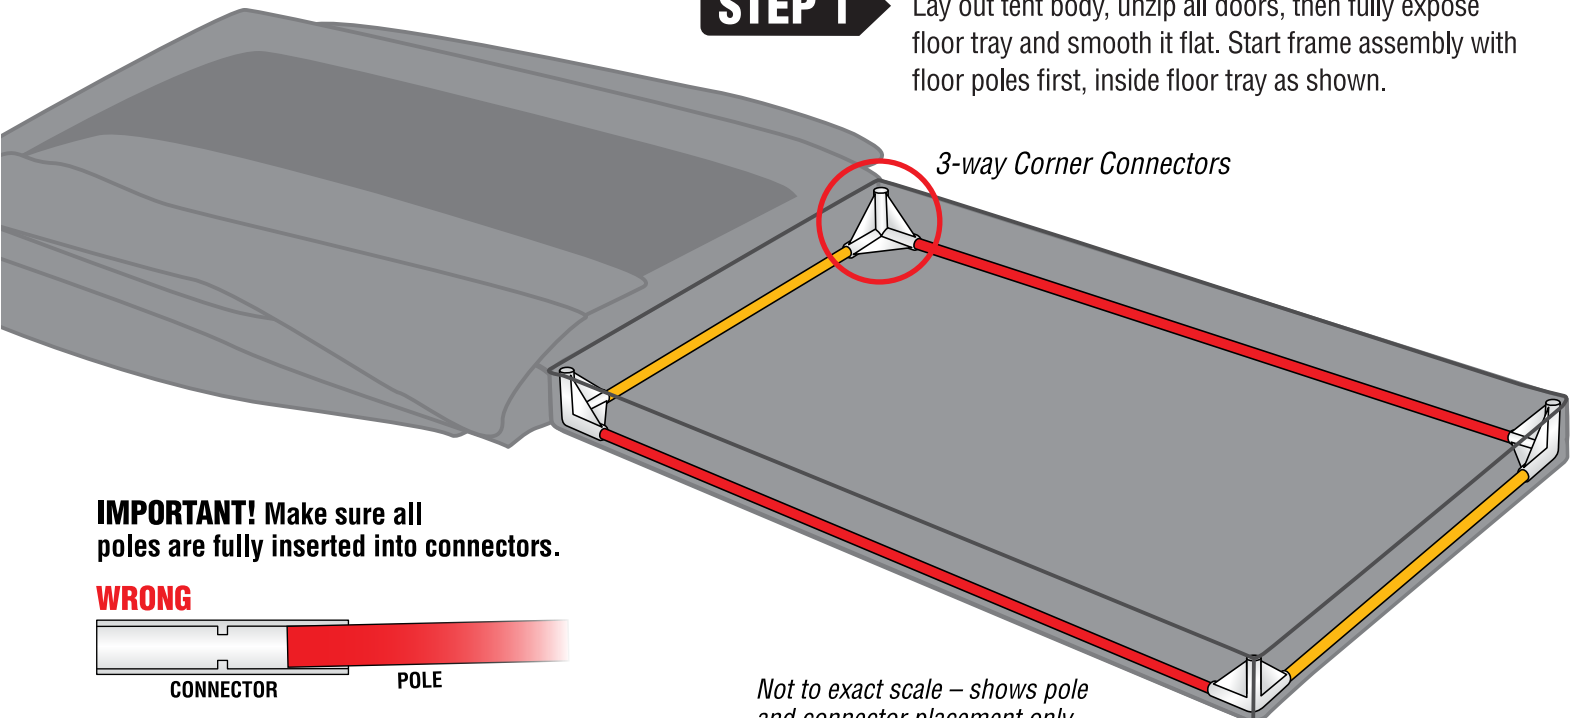

3-way Corner Connectors

IMPORTANT! Make sure all poles are fully inserted into connectors.

WRONG

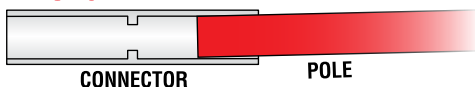

RIGHT



Not to exact scale – shows pole and connector placement only.



STEP 2 Add Wall Poles and 3-way Corner Connectors at top.



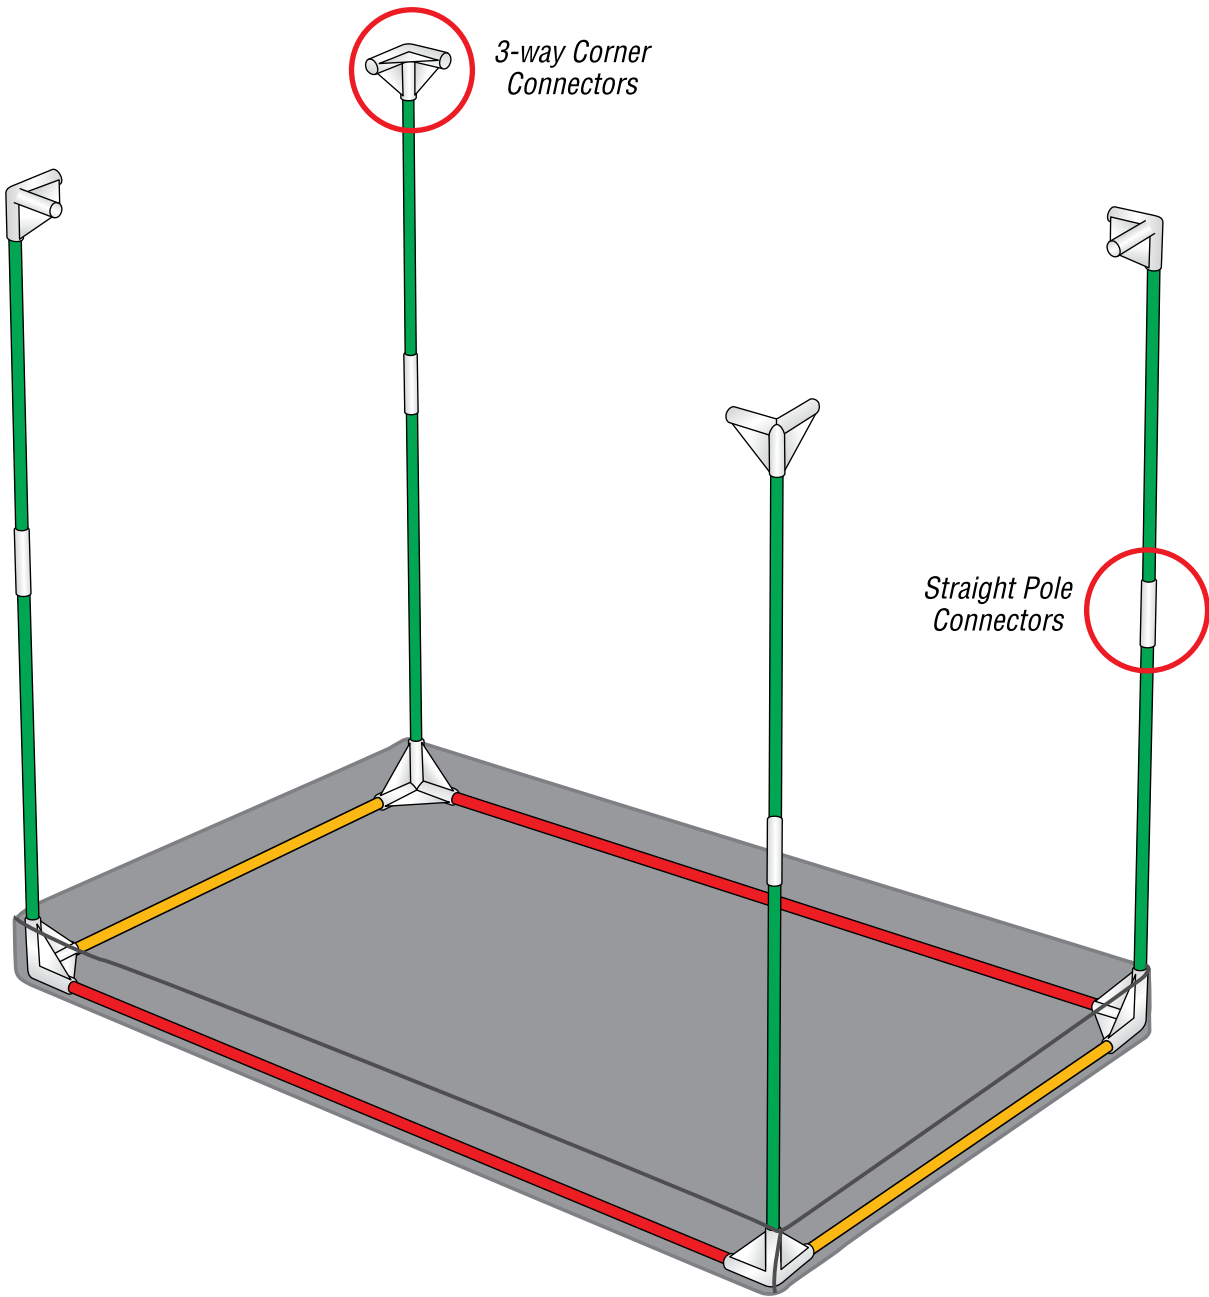


Fig. A

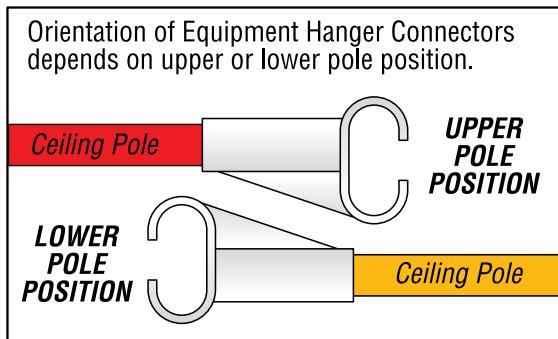


STEP 3

Assemble Ceiling Poles and Equipment Hanger Poles.

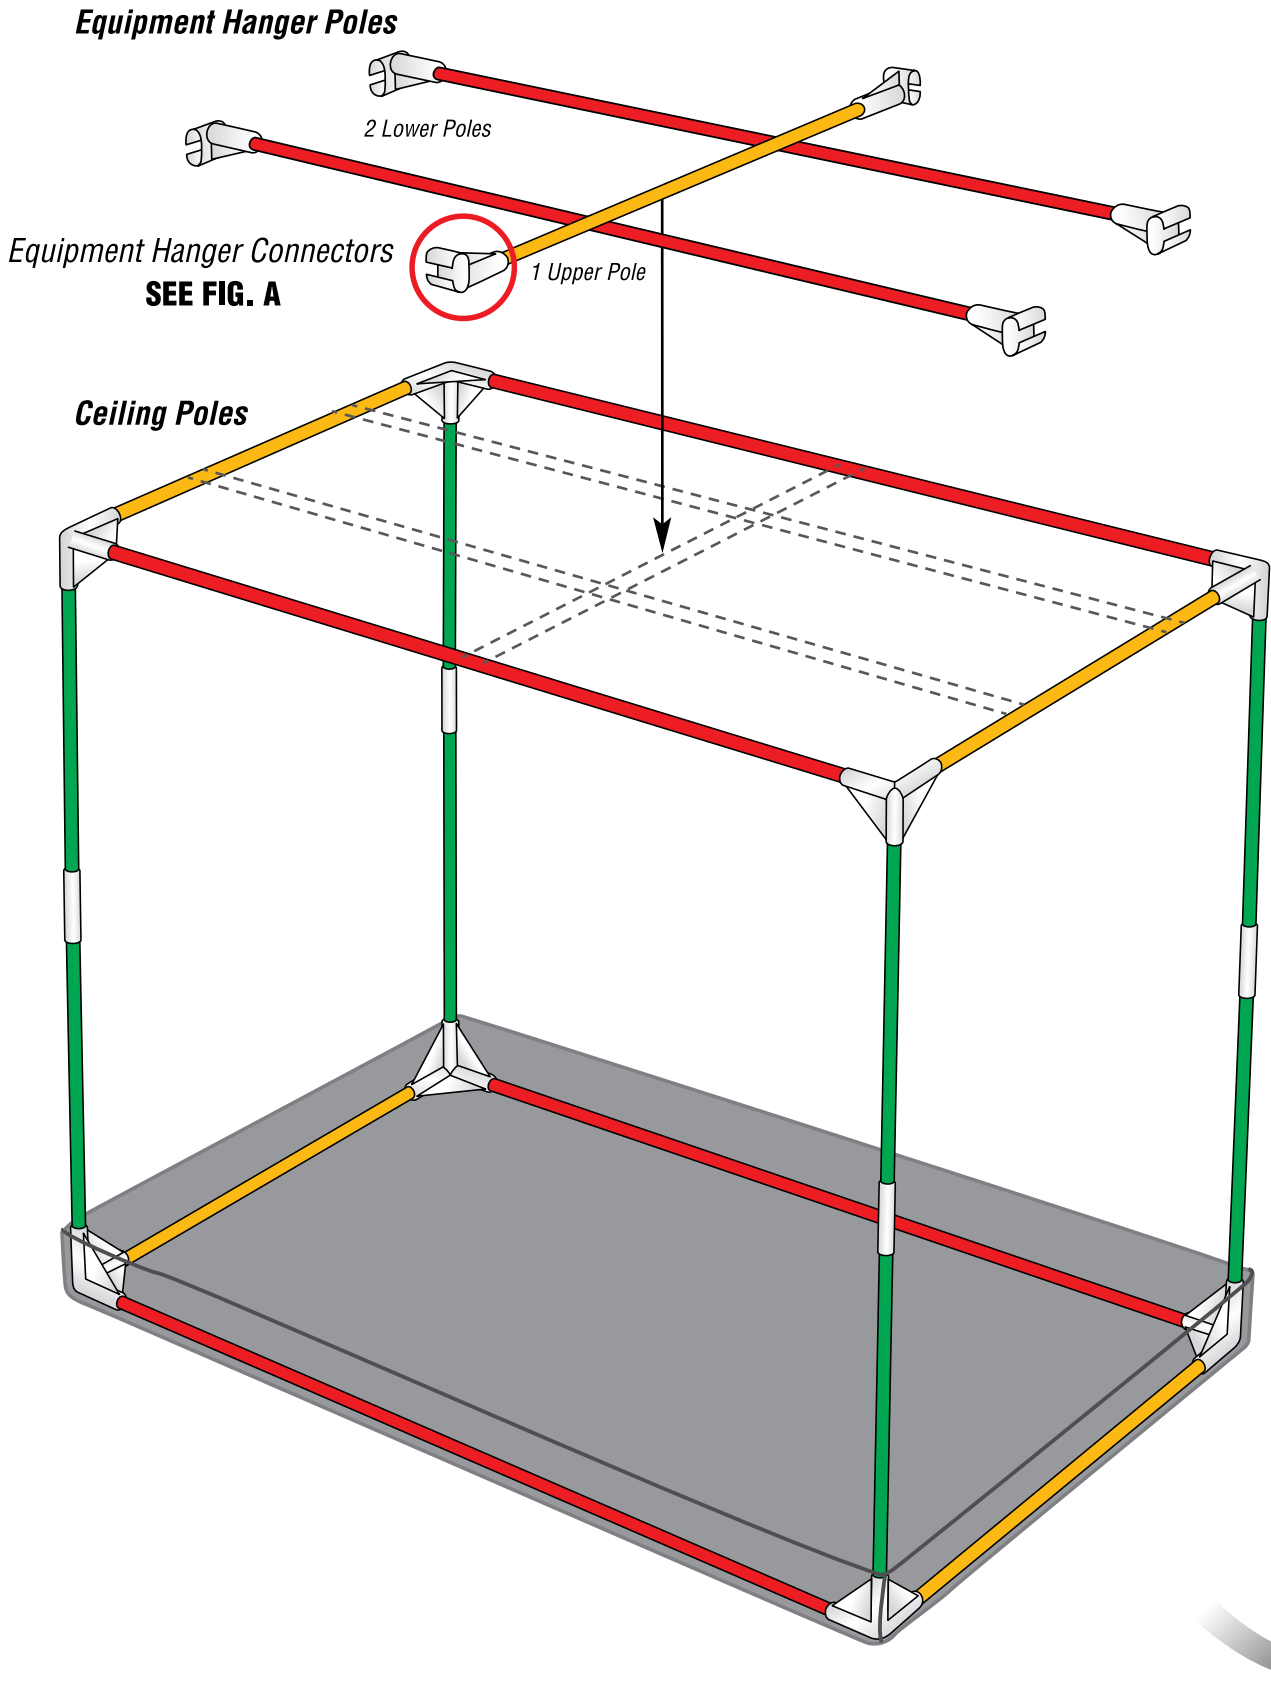


STEP 4

Carefully lift tent body and fit over completely assembled frame. After tent body is evenly placed, zip doors closed and make final adjustments to fit. Move equipment in and start growing!

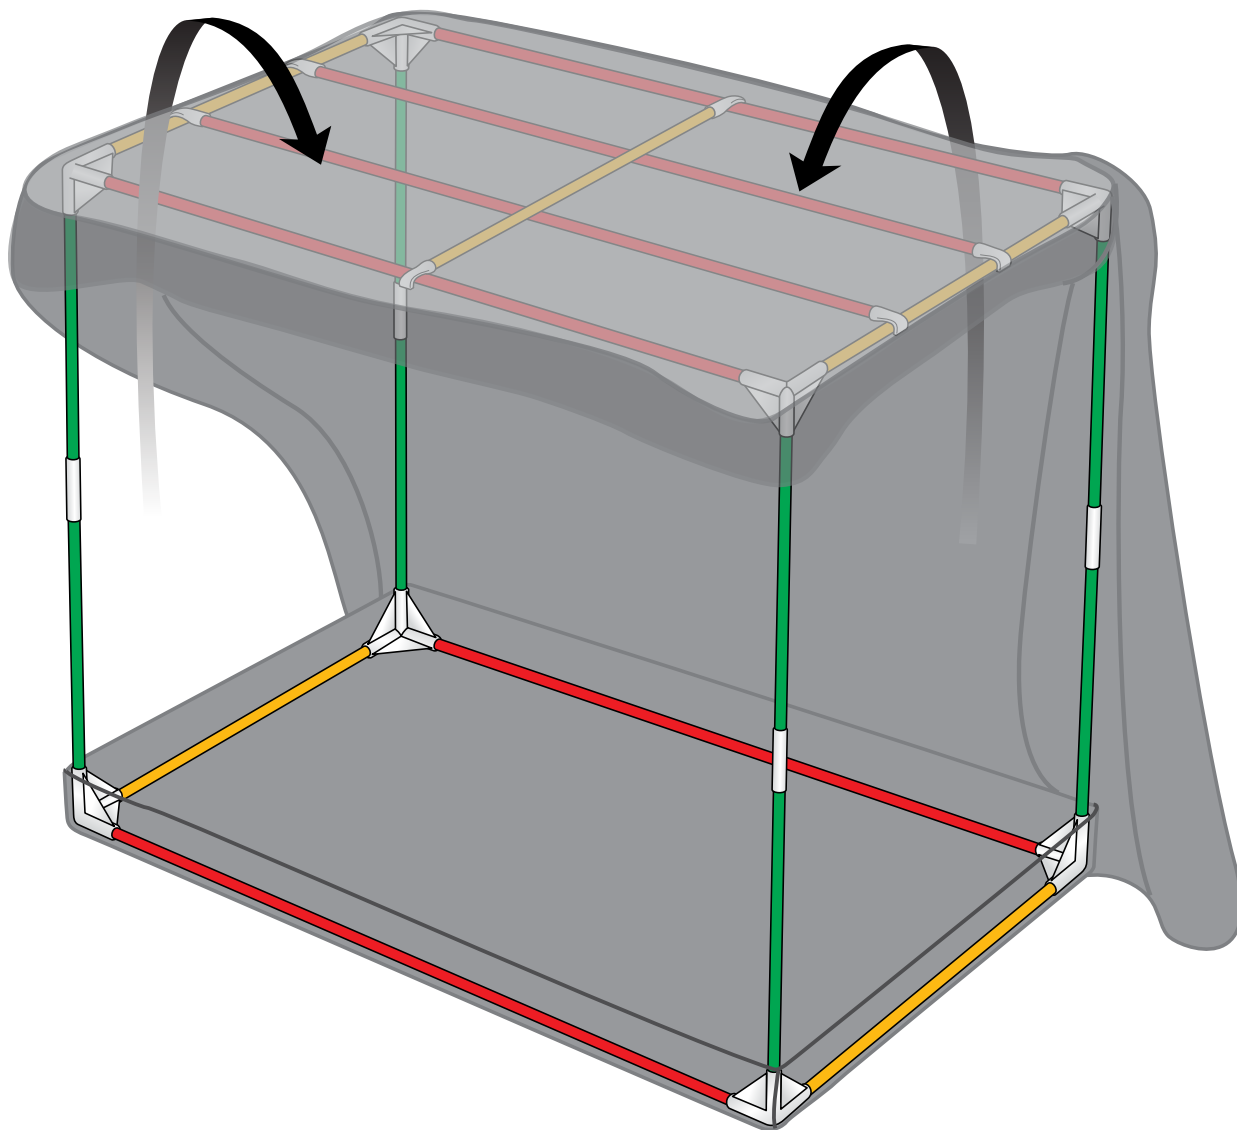

OPTIONAL ACCESSORIES

1. #706590 Elastic Support (4/pack)
2. #706592 2' x 3.33' Elastic Trellis (1/pack)
3. #706594 4' x 5' Elastic Trellis (1/pack)
4. #706596 Support Strap (2/pack)
5. #706598 16mm S Hook (5/pack)
6. #706600 22mm S Hook (5/pack)

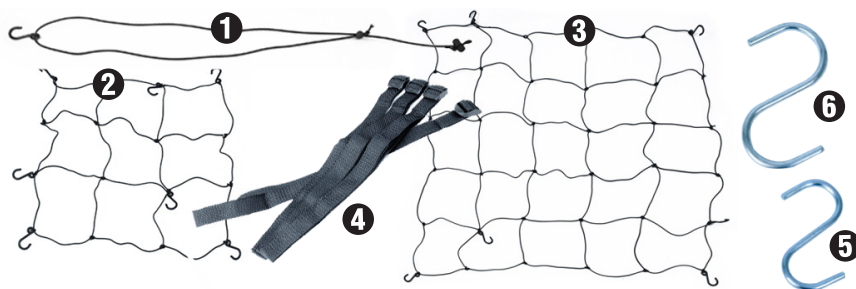

FRAME ASSEMBLY DIAGRAM

Not to exact scale – to show pole and connector placement only.

SUN HUT
Black Out
MODEL 40
Product #706306
Assembled Size: 3.9'W x 2.0'D x 5.3'H

- 8** 30.5" Wall Poles
775mm
- 6** 45.3" Floor & Ceiling Poles
1150mm
- 5** 21.6" Floor & Ceiling Poles
550mm

3-way Corner
Connectors

