


Water Hammer Arrestor Kit includes:

- 1 - Water Hammer Arrestor
- 1 - *Reducer Bushing (for 1', 1 1/2" and 2" kits ONLY)
- 1 - Tee
- 1 - 4" Nipple
- 1 - Elbow
- 1 - Close Nipple
- 1 - Union
- 1 - Roll of pink Teflon® tape

Water Hammer Arrestor Kit

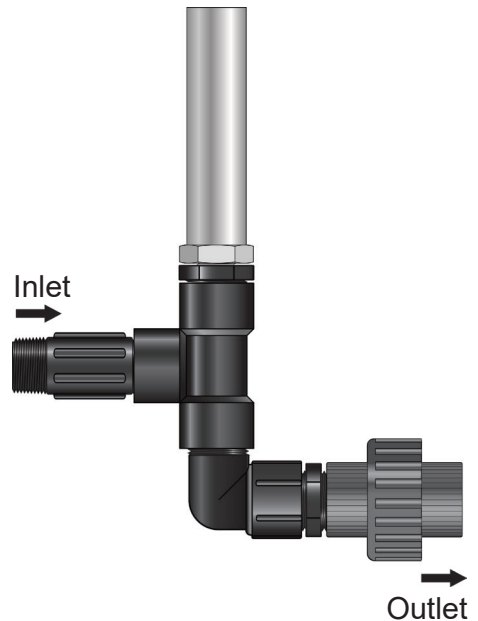

NOTE: Installation illustrations are to be used as a reference guide only.



2090 Sunnydale Blvd. • Clearwater, FL 33765
1-800-523-8499 • www.dosatronusa.com



LIT-EN-WHA-KITS

3/4"	Part #: WHA34-SS-KIT
1"	Part #: WHA100-SS-KIT
1 1/2"	Part #: WHA150-SS-KIT
2"	Part #: WHA200-SS-KIT

WHA Kit includes parts listed.
Dosatron injector sold separately.

Water Hammer Arrestor Kit

Step-by-Step Assembly Instructions


1

Prepare all male threads by wrapping 5 to 6 turns of **Teflon® tape** around them. Make sure to wrap tape clockwise to prevent unravelling.




2

Attach **4" Nipple** to center opening of the **Tee**.

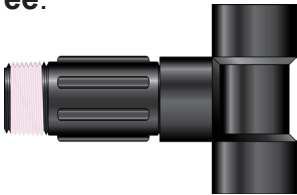

3

Holding the **Tee** so that the **4" Nipple** faces to the left, install the ***Reducer Bushing** and **Water Hammer Arrestor** on the top opening of the **Tee**.

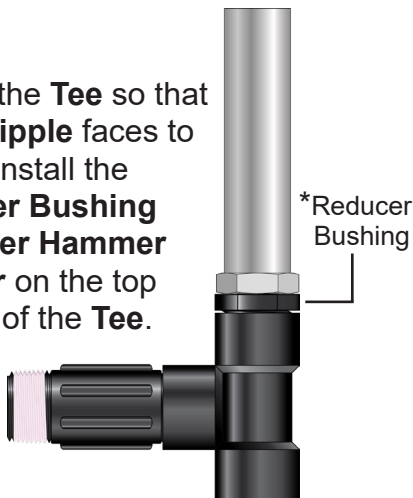

Use ***Reducer Bushing** for 1", 1 1/2" and 2" kits only, not for the 3/4" kits.

4

Attach the **Close Nipple** to the **Elbow**.



5

Install the **Elbow** at the bottom opening of the **Tee**. Make sure the **Nipple** faces to the right.



6

Attach the **Union** to the **Close Nipple**.

