


# AeroFlo<sup>2</sup> 60™ EXTENSION

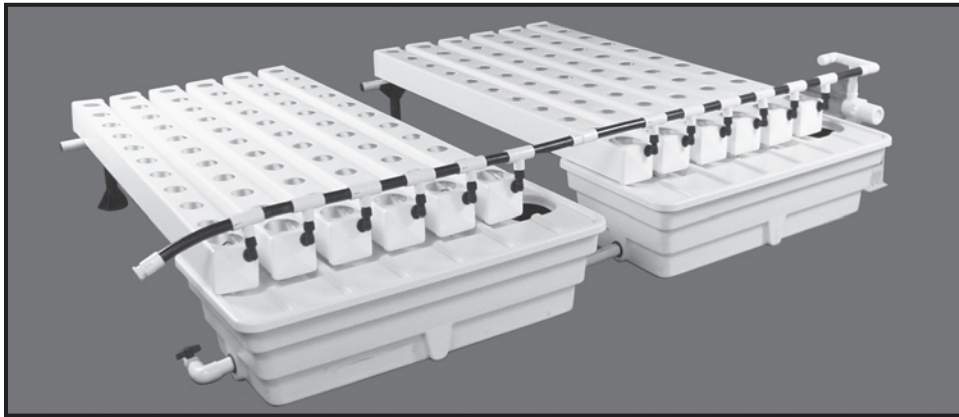

## AeroFlo<sup>2</sup> 60 Extension Parts List


- |                                 |                       |
|---------------------------------|-----------------------|
| 40 Gallon Reservoir             | 60 CocoTek Cups       |
| 6 Chambers w/Spray Lines        | Siphoning Elbow       |
| Manifold Assembly               | Hydroton              |
| “Quick Stand” support structure | FloraSeries Nutrients |
| Reservoir Coupler               |                       |
| 60 Netcups                      |                       |

### Step 1

Carefully remove the existing Drain Assembly from the AeroFlo<sup>2</sup> 60 Reservoir and set it aside.

### Step 2

Place the **Extension** Reservoir in-line with the AeroFlo<sup>2</sup> 60 Reservoir and connect the two reservoirs with the Reservoir Coupler. Place the Siphoning Elbow on the Reservoir Coupler inside of the Extension Reservoir.

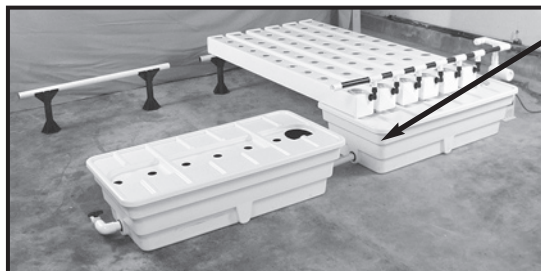

higher grommet on Extension  
lower grommet on AF60

Siphoning Elbow on Reservoir Coupler



### Step 3

Insert the Drain Assembly removed from the AeroFlo<sup>2</sup> 60 into the **lower grommet** on the other end of the Extension Reservoir.



### Step 4

Remove the end cap from the AeroFlo<sup>2</sup> 60 manifold assembly.




### Step 5

Place the Extension Chambers on the Extension Reservoir.




### Step 6

Thread the Extension Manifold onto the AeroFlo<sup>2</sup> 60 Manifold. As you turn the manifold be sure that the individual manifold connections are lined up with the Chamber inlets to facilitate connecting to the chambers.

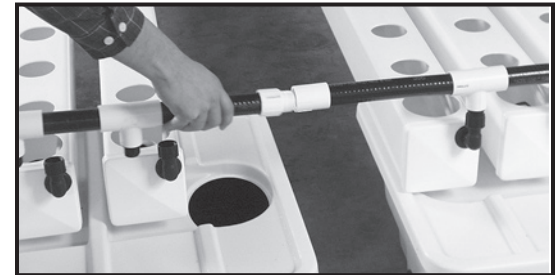

### Step 7

Attach the Manifold to the individual Extension Chambers. Insert the Netcups, CocoTek Cups and Hydroton media in the Extension Chambers as described in the AeroFlo<sup>2</sup> 60 instructions.

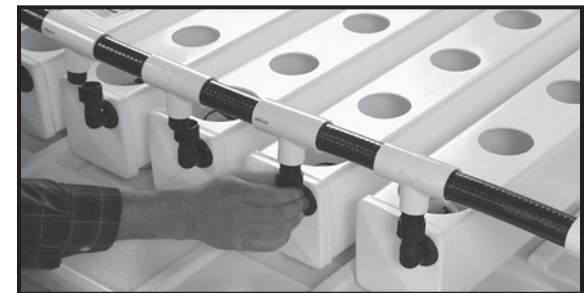

P.O. Box 1576 • Sebastopol, CA 95473  
Phone (707) 824-9376 • Fax (707) 824-9377  
www.generalhydroponics.com